

Touch-up kit instructions



1. Clean the damaged surface.

2. Make sure you have the touch-up kit compatible with the color of your floor.




3. Apply the mastic stick to the damaged surface.

4. Fill-in by rubbing on the defect.




5. Gently remove the excess mastic with a plastic scraper.

6. Wipe the surface with a dry cloth.

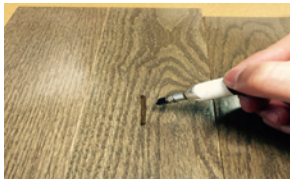

7. Apply the touch-up marker pen on the damaged surface.

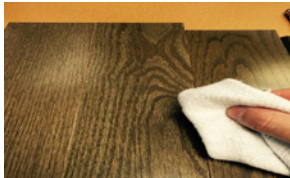

8. Immediately wipe off excess after applying to obtain a better finish.

This operation consists of removing excess stain around the touched-up area, as it is difficult to remove it when it's dry.

9. Allow to dry for about 30 minutes.

10. Do not apply any cleaning product for the first 24 hours.
